

# IDEAL WORKING CONDITIONS AT THE TOUCH OF A BUTTON

pro-cart

**pro-cart** delivers additional ergonomic comfort to users in the expanded version with integrated power height adjustment. This version can be adjusted within an adjustment range of 300 mm to the relevant workstation conditions at the touch of a button and deployed as a sitting or standing workstation. This flexibility is also supported by the monitor holder (with VESA 75 / 100 adapter) and the keyboard shelf which can be adjusted as a single unit and hence are always positioned in an optimum relationship with each other. The remote control for variable height adjustment is attached to a separate shelf to save space (at the side). Overall, height adjustment can be carried out with a load of up to 20 kg / 44 lbs.



# IDEAL WORKING CONDITIONS AT THE TOUCH OF A BUTTON

pro-cart

Designation: **pro-cart** with electric height adjustment

Order number: PT.5012.XXX <sup>1)</sup>

Base with an installation height of 35 U <sup>2)</sup> and an overall height of 1332 mm, equipped with:





- 4 twin swivel castors with Ø 100 mm, 2 lockable castors, optionally with wall protectors (see picture)
- 1 electric height adjuster with power pack (input voltage: 230 V and 50 / 60 Hz)
- 1 shelf with handle
- 1 monitor mounting with VESA 75 / 100 adapter up to 14 kg / 30.8 lbs monitor weight
- 1 keyboard holder with pull-out mousepad (right / left)
- 1 push handle, rear
- 1 remote control for electric height adjustment
- 1 cable winder
- 1 connection cable earthed, 5 metres

**Payload (height adjustment):** up to max. 20 kg / 44 lbs

**Total load capacity:** up to max. 80 kg / 176 lbs

**Finish:**

- RAL 7035 light grey powder-coated
- Handle optional see <sup>1)</sup>

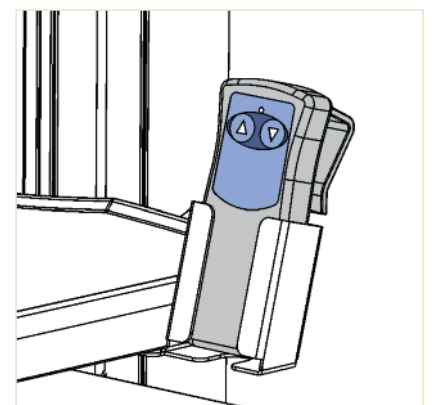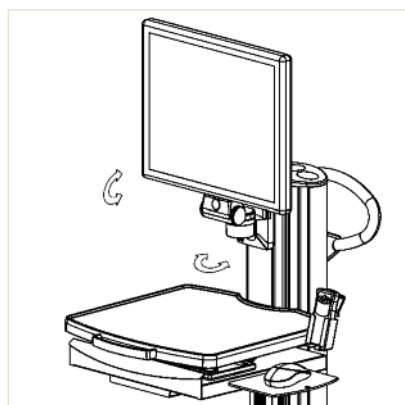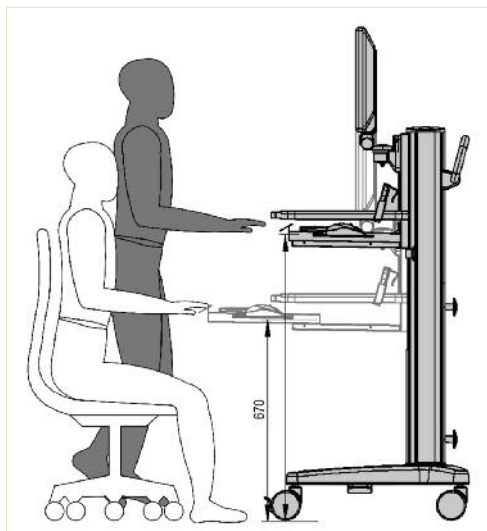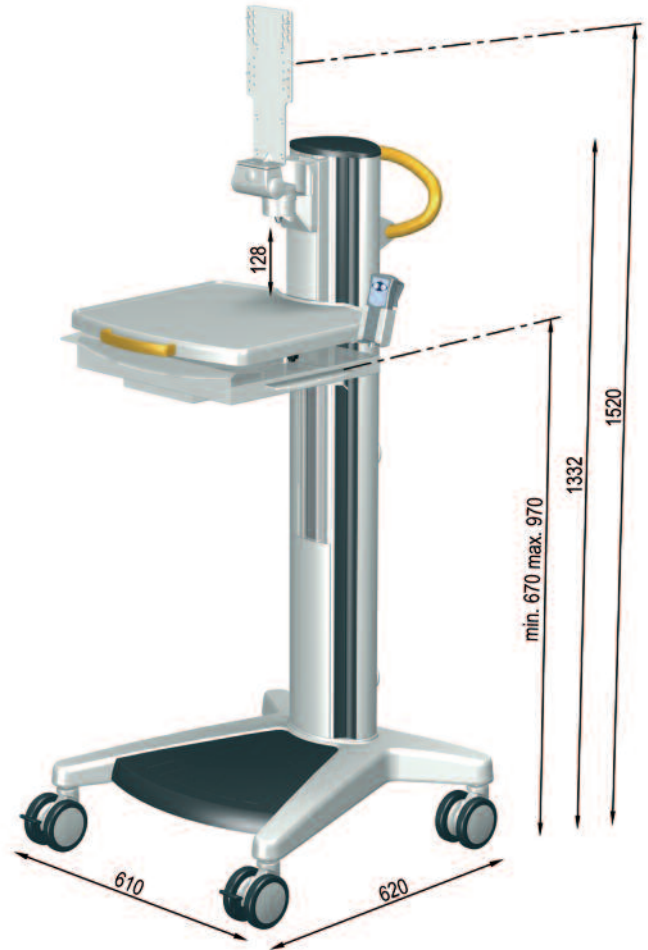

**pro-cart** can be configured to the relevant working position at the touch of a button. This enables the carrier to be adapted to the ideal ergonomic conditions.

The **monitor mounting** is tiltable by  $\pm 15^\circ$  and can be swivelled through  $\pm 20^\circ$ . It is ideal for monitors with VESA 75 / 100 adapter up to 14 kg.

The **remote control** for variable powered height adjustment in a range of 300 mm is attached to a shelf.

<sup>1)</sup> **Trim colour:** Make sure you replace .XXX with .903 = RAL 7035 light grey, .908 = RAL 5015 sky blue oder .909 = RAL 1003 signal yellow

<sup>2)</sup> 1 U = 32 mm

